



Conductivity Test Kit

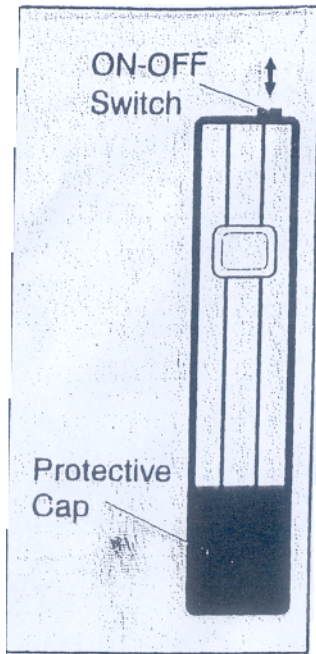

1. Press the ON / OFF switch once to turn the tester on. Refer to the illustration below.
2. Remove protective cap from the bottom.
3. Immerse the bottom of the tester 1.0 to 3.5 inches into the sample.
4. Using the tester, gently stir the sample for several seconds. When the digital display stabilizes, read the conductivity value.
5. Rinse the bottom of the tester. Replace the cap.

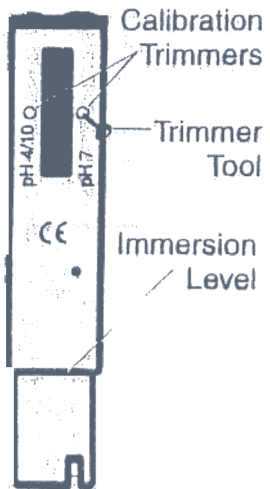

Calibration

1. Measure the $\mu\text{S}/\text{cm}$ of a known Calibration Standard using the tester.
2. If necessary, adjust the Calibration Trimmer (shown in illustration below) using the supplied trimmer tool until the reading corresponds to the concentration of the known Calibration Standard.